What's Included in Your Flair Signature

 Main Post & Lever
Travel Case
Drip Tray (optional in stainless steel)
Dosing Cup & Funnel
Brew Head (portafilter, plunger, cylinder & stainless steel screen)
Travel Case
Drip Tray (optional in stainless steel)
Drip Tray (optional in stainless steel)
Pressure Gauge



Don't break your Flair! Never brew in the Black!



Before Brewing with Your Flair

Crema is only obtained when your espresso is brewed correctly.

Fresh Whole Coffee Beans Required:

Your Signature's Bottomless 2-in-1 Portafilter will

not work with pre-ground beans. We recommend

whole coffee beans roasted within a few weeks of use and ground immediately before brewing.

No Blade Grinders!

Start with brew temperatures between 198-208°F (92-97

experiment with different grind and dose sizes.

° C), ensure your beans are freshly roasted and ground and

How Do I Get Good Crema?

Burr Grinder Required:

Brewing with Your Flair

Need Help? www.flairespresso.com/brewguide

#1 - Prepare the Flair

(a) Insert post into base and place drip tray onto base. (b) Take apart brew head. (c) To convert to bottomless brewing, remove spout by pulling down. Don't tamp with spout inserted.

#2 - Prepare your Beans

(a) Grind between 12-16 grams of beans with burr grinder.(b) Affix funnel to portafilter and fill with grounds. (c) Tamp lightly.(d) Remove funnel and place portafilter on post and add screen.

#3 - Prepare the Brew Head

(a) Ensure plunger is at top of cylinder. (b) Invert cylinder in sink or bowl & fill with boiling water. Leave for 30 seconds. (c) Empty preheat water and add cylinder to portafilter on the base.

#4 - Brew with Flair

(a) Add brew water (198-208 ° F, 92-97 ° C). Do not underfill. (b) Affix gauge stem to the top of cylinder. (b) Lower lever. Brew time should be 35-45 seconds at 6-9 BAR if grind and dose are correct.





Dialing in Your Flair

Cleaning & Storing Your Flair

The best way to learn to use your Flair is by watching. Visit our brewing guide for training videos and troubleshooting. **www.flairespresso.com/brewguide**

Our team is standing by to help! If you experience any problems, please contact us immediately at: **service@flairespresso.com**

Your Flair is backed by a 5-year limited warranty. For details visit: **www.flairespresso.com/warranty**



28-B Hammond Street Irvine, CA, 92618 USA © Intact Idea, All Rights Reserved

Flair is a trademark of Intact Idea, LLC. • Designed in California - Made in China

Brewing espresso with the Flair is a combination of the **right grind**, the **right pressure**, and the **right brewing time**.

Everything starts with the grind and dose, which creates the resistance to achieve desired pressure and brewing time. "Flairistas" who have mastered their technique will brew between 6 and 9 BAR at a time between 35-45 seconds.

Please use the chart below to help you dial-in.

			PRESSURE		
		1-5 BAR	6-9 BAR	10-12 BAR	>12 BAR
DKEVV HIVIE	More Than 45 Seconds	More Pressure	Grind More Coarse	Grind More Coarse	! GROUNDS
	35-45 Seconds	Grind More Fine	Espresso Made Right	Grind More Coarse	DANGER! STOP & DISCARD GI
	Less Than 35 Seconds	Grind More Fine	Grind More Fine	Less Pressure	STOP & I

Follow these steps to store your Flair.

Remove used espresso grounds from your Flair by knocking them out against the side of a trash can, invert the portafilter and blow into the spout, or dig the grounds out with a utensil.

Once grounds are removed, rinse all brewing parts in cool water.

No soap needed! Never put Flair parts in dishwasher.



QUICK START GUIDE



Flair Signature Models Video Tutorials: www.flairespresso.com/brewguide